

JACK H2 THREADING GUIDE

Follow the numbered path (1-7) to thread the machine.

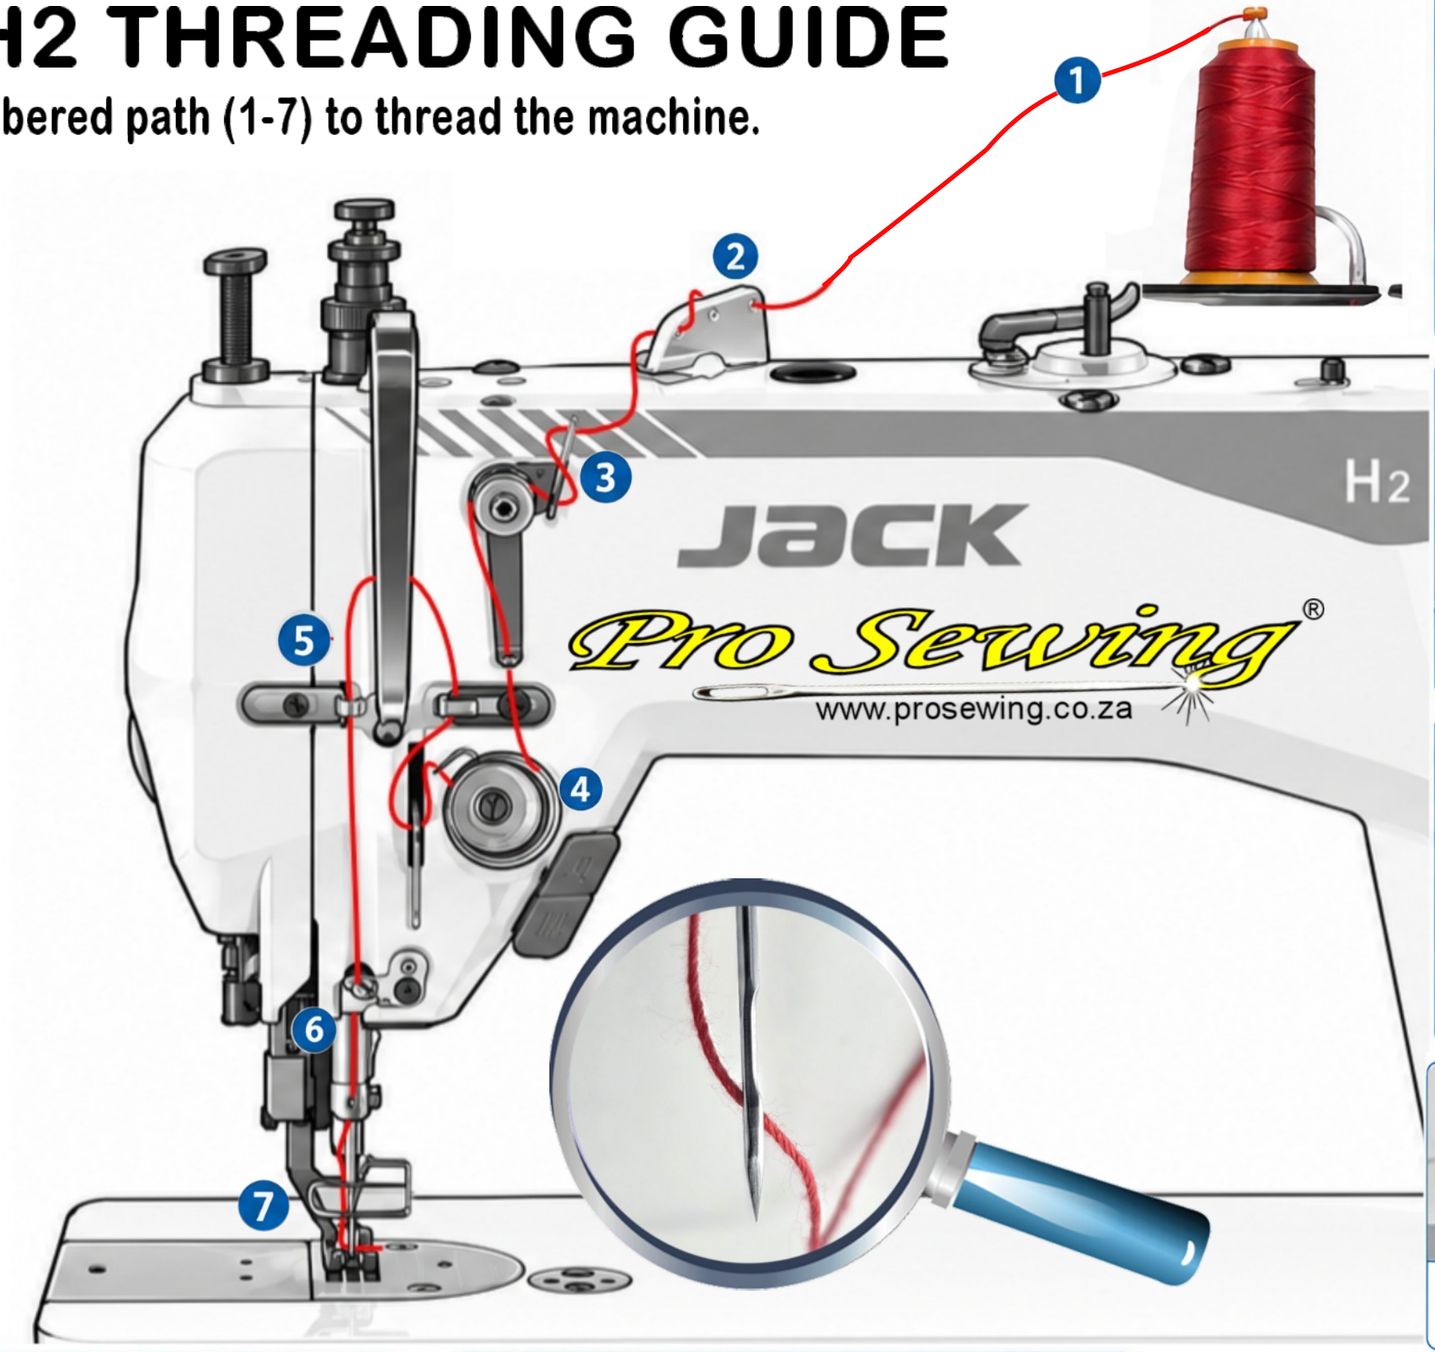




From the spool, pull the thread upward.

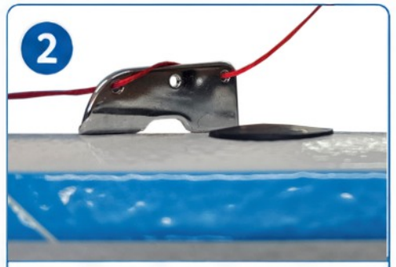

Pass the thread through the top thread guide.



Guide the thread down through the take-up lever.

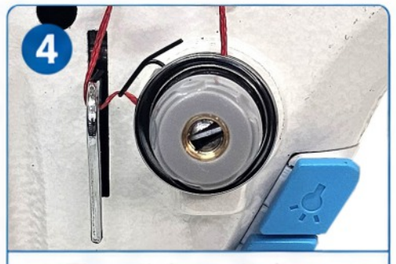


Thread through the main tension assembly.



Pass the thread through the tension guide.



Pass the thread through the lower thread guide.

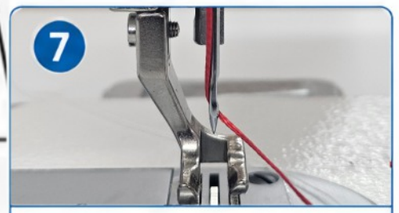

Thread the needle from left to right.

Disclaimer:
This Machine can not use this thick thread, this is only for learning purposes!

LOCATION:
48 Durban Street, Cnr End Street, City and Suburban, Johannesburg.


TEL: 011 334 6759/60

EMAIL: marketing@prosewing.co.za

NOTES

- Raise the presser foot before threading.
- Make sure the thread is properly seated in the tension discs.
- Use high-quality thread for best results.

✔ **CORRECT**
Thread between tension discs

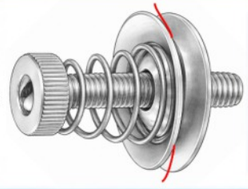

✘ **INCORRECT**
Thread over or under tension discs

