
JACK A4 THREADING GUIDE


Follow the numbered path (1-8) to thread the machine.

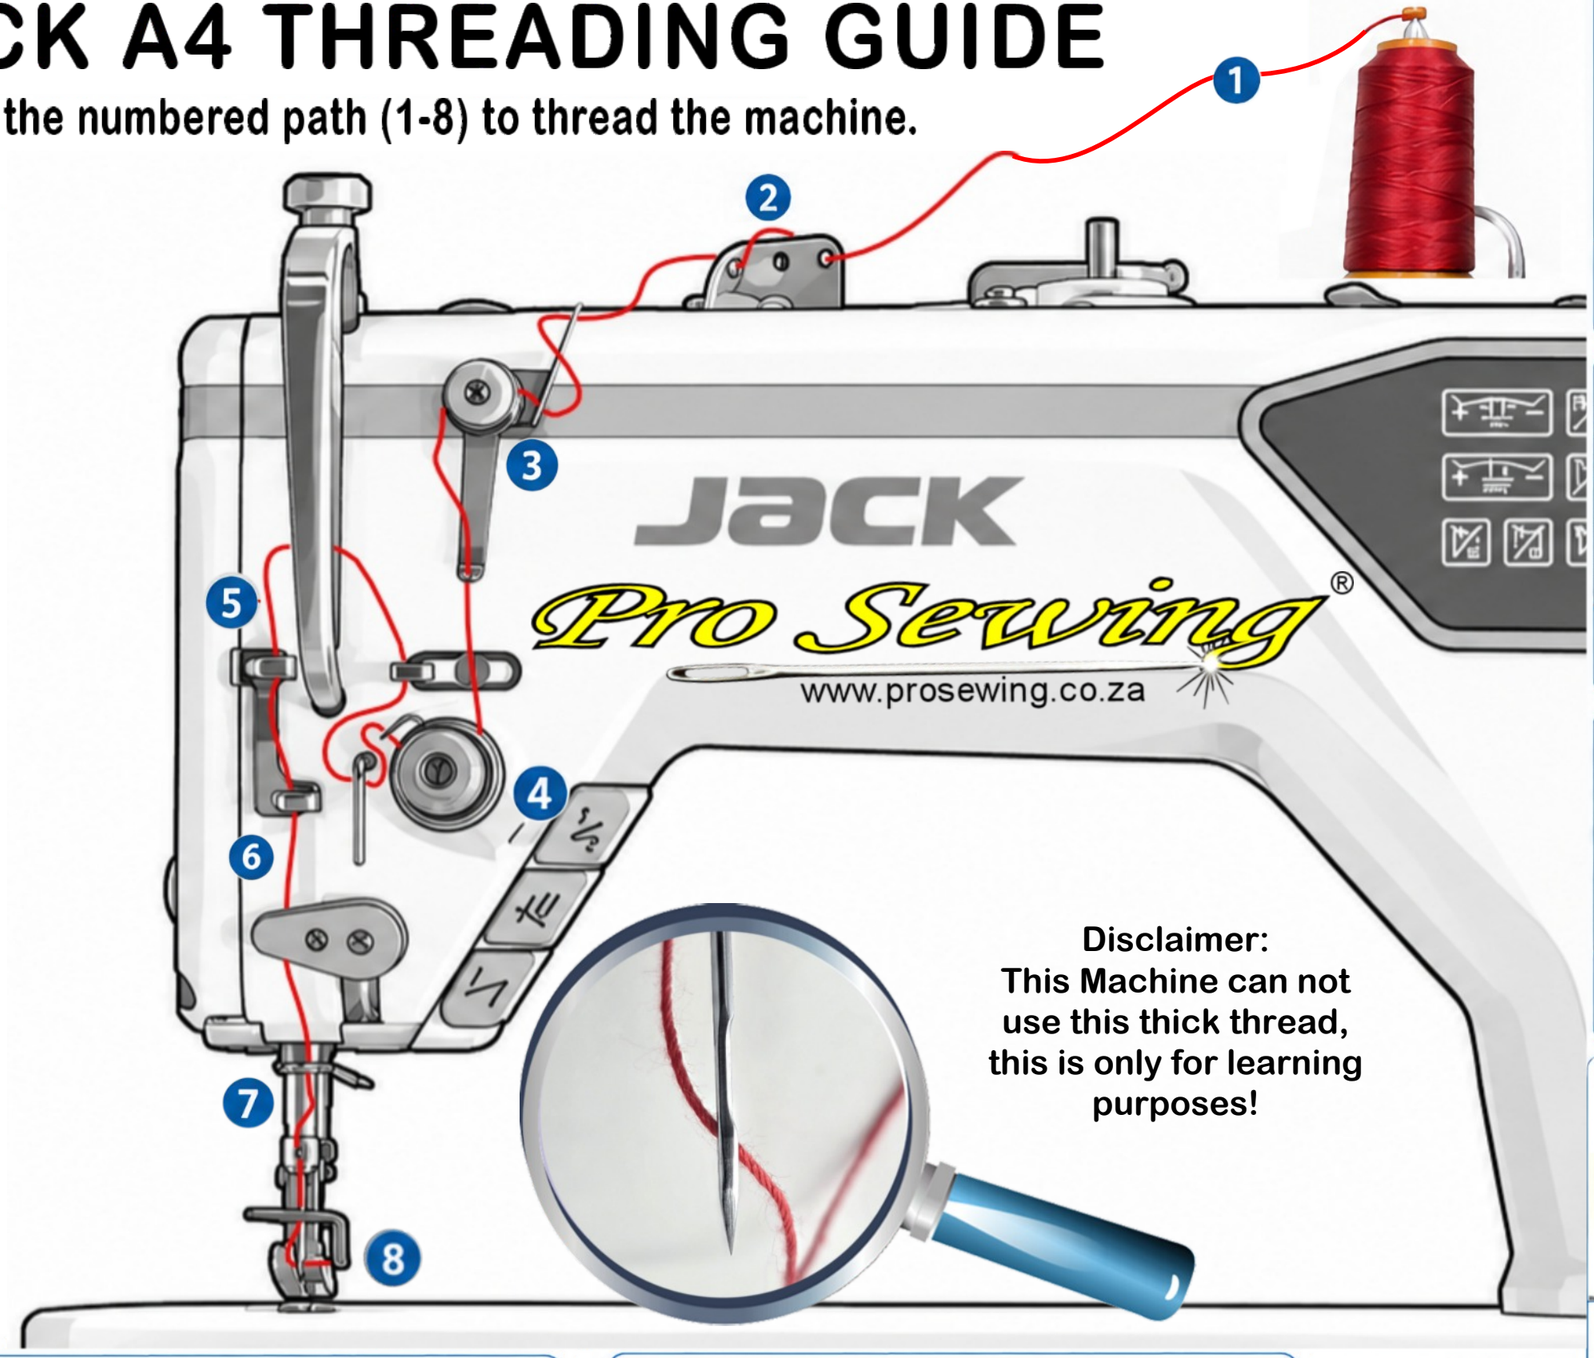


Disclaimer:
This Machine can not use this thick thread, this is only for learning purposes!




From the spool, pull the thread upward.

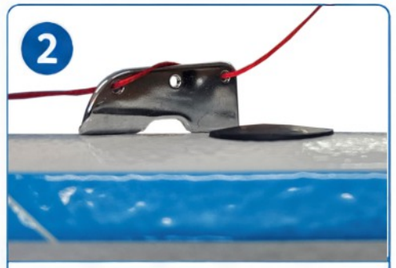


Pass the thread through the top thread guide.

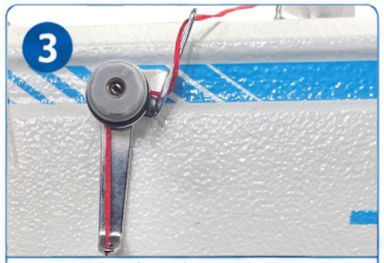


Guide the thread down through the take-up lever.

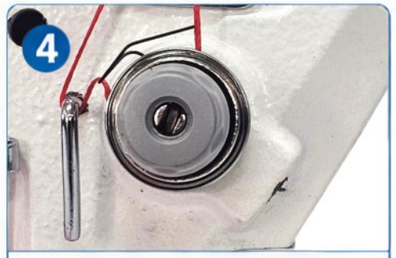

Thread through the main tension assembly.

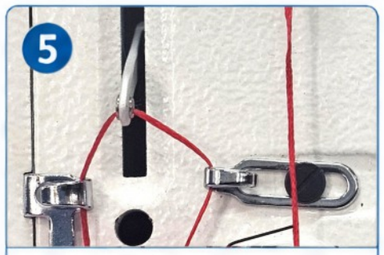

Pass the thread through the tension guide.

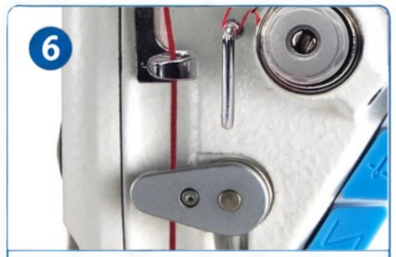

Pass the thread through the lower thread guide.



Pass the thread through the lower thread guide.



Thread the needle from left to right.

LOCATION:
48 Durban Street, Cnr End Street, City and Suburban, Johannesburg.


TEL: 011 334 6759/60

EMAIL: marketing@prosewing.co.za

NOTES

- Raise the presser foot before threading.
- Make sure the thread is properly seated in the tension discs.
- Use high-quality thread for best results.

✔ **CORRECT**
Thread between tension discs

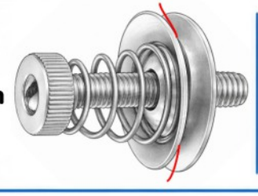

✘ **INCORRECT**
Thread over or under tension discs

